
Installation Guide - GreaseShield®3000-DW

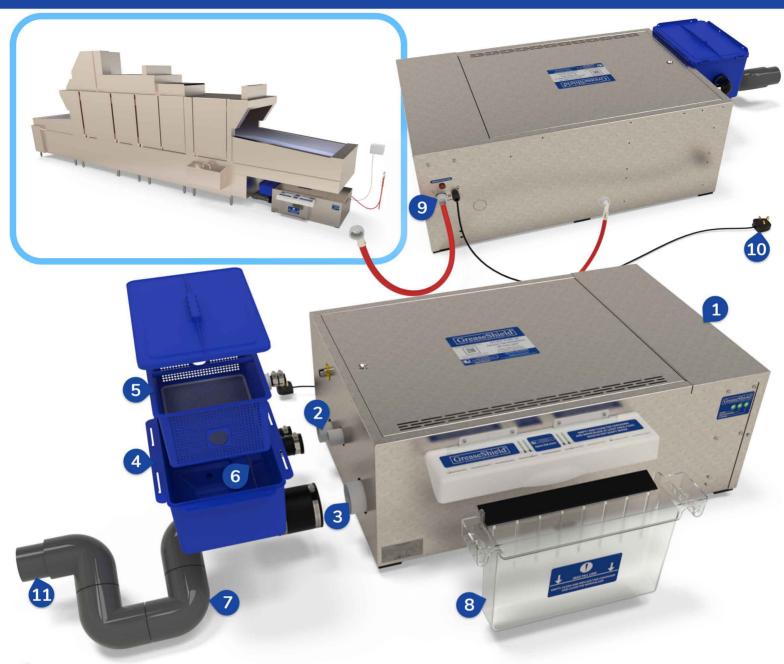

- 1 GS3000-DW Unit: Ensure that there is sufficient clearance above and to the right of the unit for servicing purposes (5.9"/150mm minimum).
- Inlet Pipe 2"/54mm: To be piped with a sufficient fall of no less than 1 in 40.
- Outlet Pipe 3"/76mm: To be piped with a sufficient fall of no less than 1 in 40.

- Pre-Filter: Ensure sufficient height above the Pre-Filter to allow for removal and daily maintenance of Pre-Filter basket.
 Pre-Filter Basket: A Pre-Filter basket must be installed into the pre-filter at all times.
 Pre-Filter Support Bar: The support bar must be installed when attaching the Pre-Filter
 Running Trap: The outlet on unit must be fitted with a running trap to reduce foul smells. A 3"/76mm running trap can be Running Trap: The outlet of unit must be fitted with a running trap to reduce foul smells. A 3"/76mm running trap can be made using a series of 90° elbows.
- FOG Container: Ensure that the container is not restricted or blocked for daily maintenance.
- Hot Water Solenoid Valve: Hot water must be connected to the unit using the 3/4" BSP (F/F) Red PVC Hose provided, water supply must not exceed 3 bar pressure and 60°C/140°F. In the case of high pressure a pressure reducing valve must be used. Mains water connections must be made via a WRAS approved isolation valve which follows a WRAS approved double check valve.
- Power Lead: The unit must be plugged into a 13 amp rated IP56 socket located below counter level.
- Interconnecting Pipework: All pipework must be clipped and properly supported.




V7 11/10/2022

Installation Guide - GreaseShield®3000-DW





- Make sure the unit is installed on level ground or adjust the stand feet to ensure the unit is level.
- Have a hot water connection available to connect to the unit, if one is not available the unit must be equipped with a Genie H2O to give hot water on demand. Water connection must be made via a WRAS approved isolation valve (A) and double check valve (B).

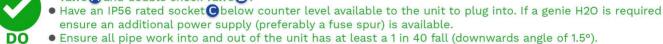

- Clean the Pre-Filter basket and FOG container daily.
- An Air Admittance Valve nust be installed after the running trap so a siphon doesn't occur.
- X DON'T
 - Place the unit in passageways where it can be a hazard or be damaged.
 - Open the unit or insert hands into any part of the unit; moving parts can cause injury.
 - Stand or place heavy objects on top of the unit.
- DON'T Dismantle the unit in any way, only qualified service staff are to access the inside of the unit.



V7 11/10/2022