


# Component Diagram - GreaseShield®1000-FLF

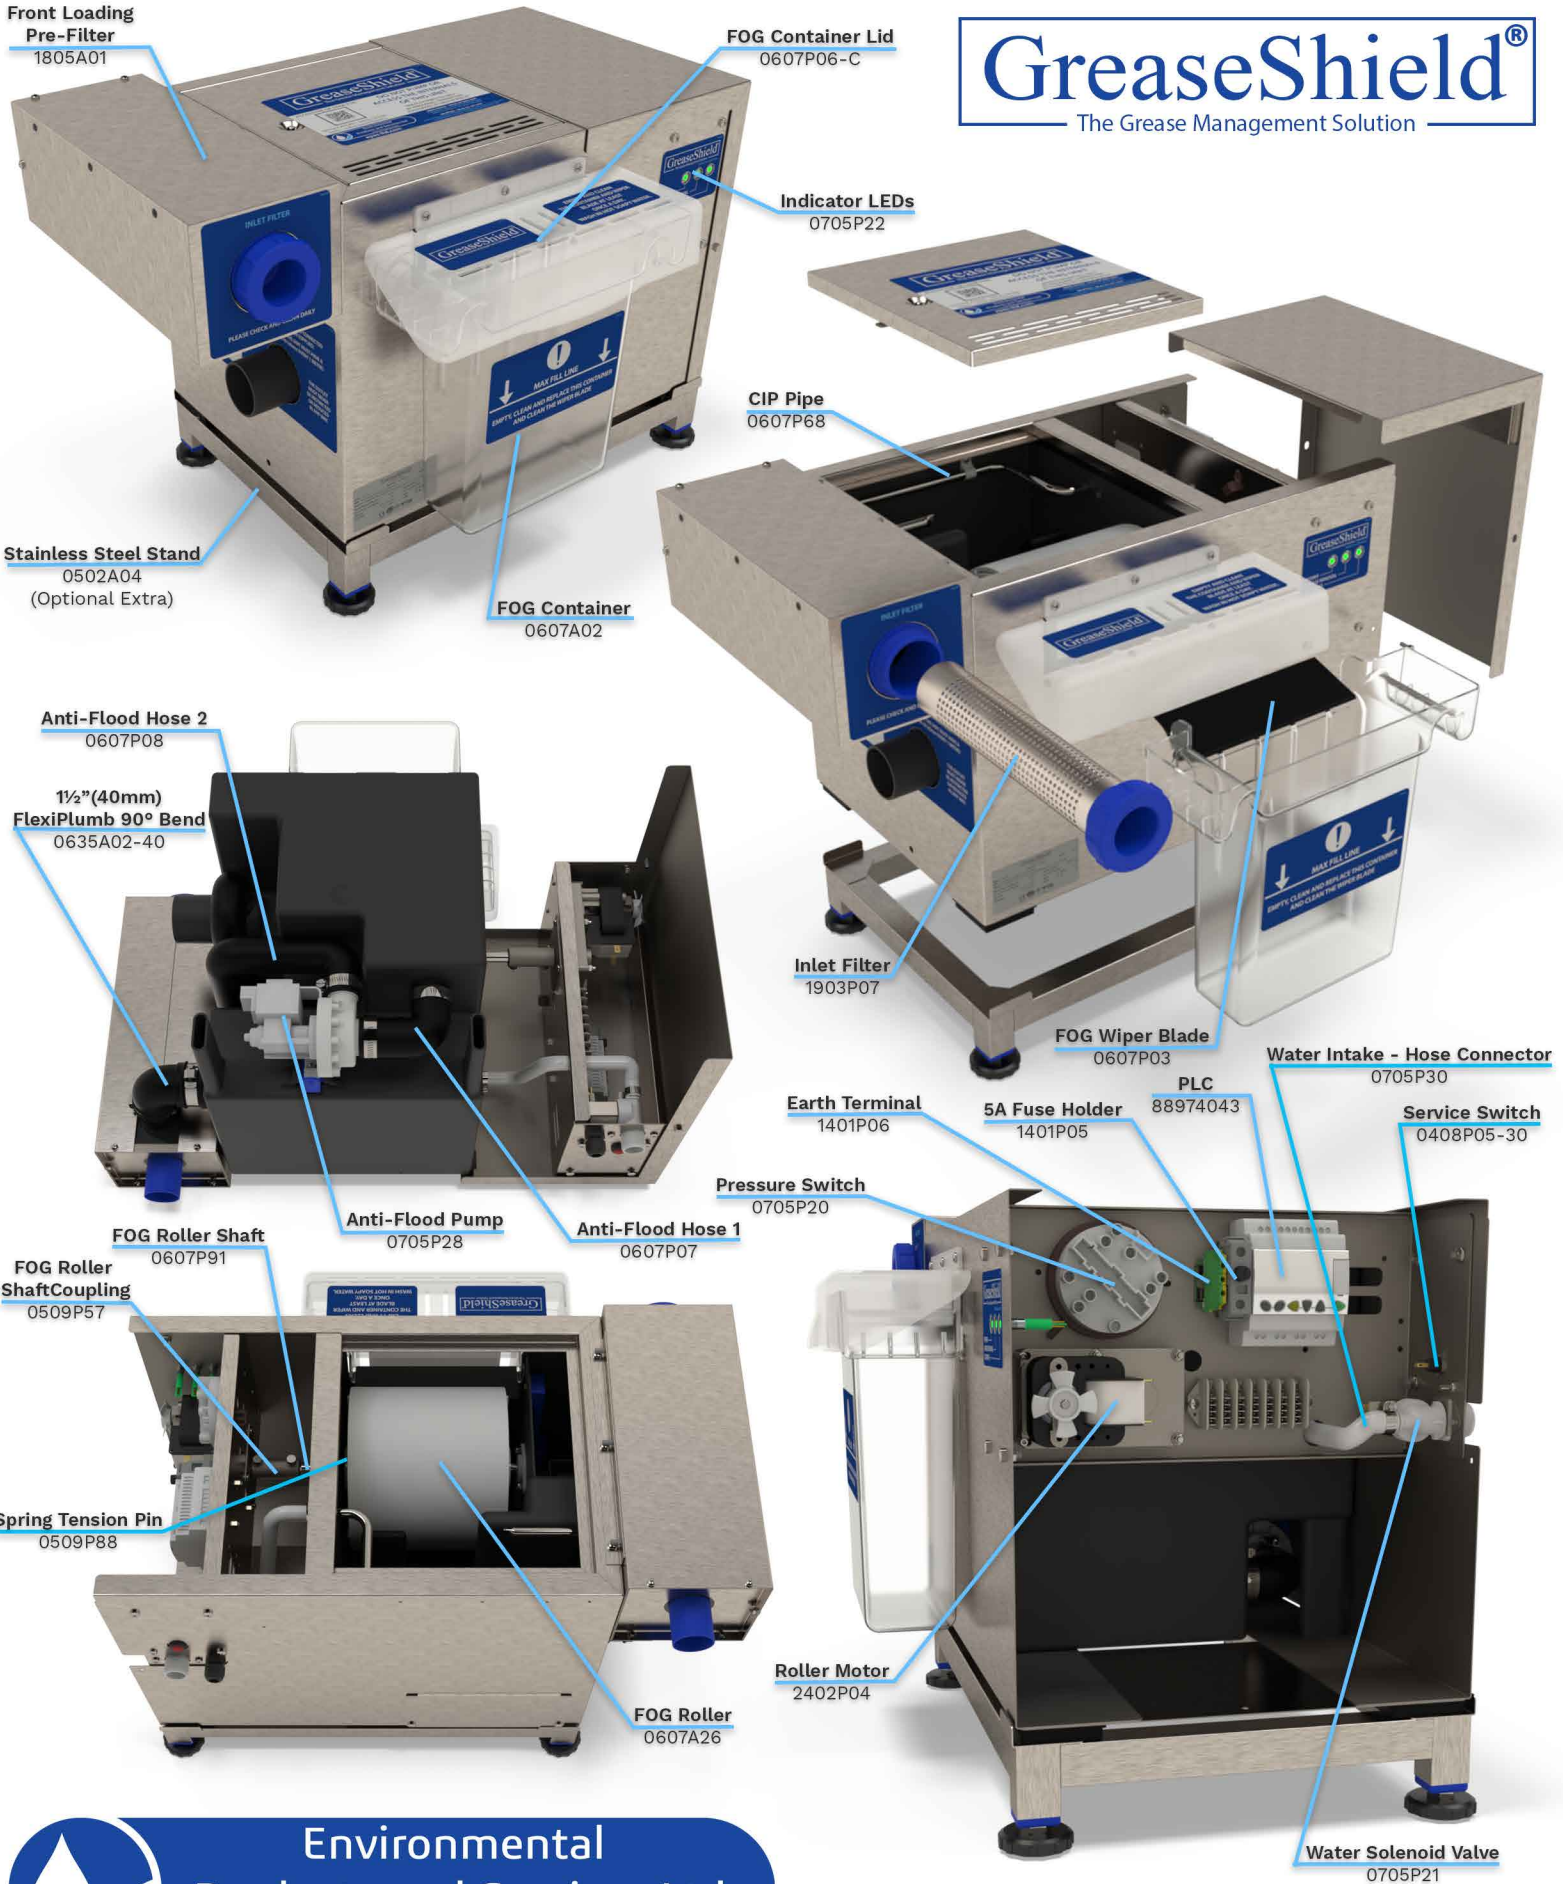

**Front Loading Pre-Filter**  
1805A01

**FOG Container Lid**  
0607P06-C

**Indicator LEDs**  
0705P22

**Stainless Steel Stand**  
0502A04  
(Optional Extra)

**FOG Container**  
0607A02

**CIP Pipe**  
0607P68

**Anti-Flood Hose 2**  
0607P08

**1½" (40mm) FlexiPlumb 90° Bend**  
0635A02-40

**Inlet Filter**  
1903P07

**FOG Wiper Blade**  
0607P03

**Water Intake - Hose Connector**  
0705P30

**Earth Terminal**  
1401P06

**5A Fuse Holder**  
1401P05

**PLC**  
88974043

**Service Switch**  
0408P05-30

**Pressure Switch**  
0705P20

**FOG Roller Shaft**  
0607P91

**Anti-Flood Pump**  
0705P28

**Anti-Flood Hose 1**  
0607P07

**FOG Roller ShaftCoupling**  
0509P57

**Spring Tension Pin**  
0509P88

**Roller Motor**  
2402P04

**FOG Roller**  
0607A26

**Water Solenoid Valve**  
0705P21



**Environmental Products and Services Ltd**

Award Winning Technology

[www.GreaseShield.com](http://www.GreaseShield.com)

HEAD OFFICE +44 (0) 28 3083 3081

[sales@epas-ltd.com](mailto:sales@epas-ltd.com)

GB OFFICE +44 (0) 161 477 5555

V6 16/01/2023