

Installation Guide - GreaseShield®1850-FS1000



- 1 **GS1850 Unit:** Ensure that there is sufficient clearance above and to the right of the unit for servicing purposes (5.9"/150mm minimum).
- 2 **Inlet Pipe – 1½"/40mm:** To be piped with a sufficient fall of no less than 1 in 40.
- 3 **Outlet Pipe – 2"/54mm:** To be piped with a sufficient fall of no less than 1 in 40.
- 4 **Invert Inlet – 1¼"/32mm:** Must be kept capped off with the 1¼"/32mm FlexiPlumb Endcap provided (for servicing use only)
- 5 **Decant Outlet Hose – ¾"/18mm:** To be piped directly into the main drainage pipe via a vented drainage stack as shown. The Hose must be fixed in place using the drainage hose support provided.
- 6 **FS1000 Unit:** Ensure that there is sufficient clearance in-front of the unit so the drawer can be pulled out fully (15.7"/400mm minimum).
- 7 **FS1000 Drawer:** The Drawer on the FS1000 must be fully closed during normal operation and should only be opened for cleaning and daily maintenance.
- 8 **FS1000 Basket:** A FS1000 basket must be installed into the unit at all times, ensure there is sufficient clearance for basket removal when the drawer is pulled out fully.
- 9 **FS1000 Lid:** The FS1000 Lid must be screwed in place during normal operation, and only removed for maintenance purposes.
- 10 **FS1000 Adjustable Levelling Feet:** FS1000 unit has adjustable levelling feet. It can be adjusted up to 5.3"/135mm in height to allow the unit to be raised up and levelled on uneven surfaces and provide access for cleaning.
- 11 **Vortex Flow Controller:** Must be fitted to the FS1000 inlet connection.
- 12 **Sampling Point:** Connected to the outlet of the unit: it is essential in the analysis of effluent leaving the unit.
- 13 **Running Trap:** The outlet of unit must be fitted with a running trap to reduce foul smells.
- 14 **FOG Container:** Ensure that the container is not restricted or blocked for daily maintenance.
- 15 **Hot Water Solenoid Valve:** Hot water must be connected to the unit using the ¾" BSP (F/F) Red PVC Hose provided, water supply must not exceed 3 bar pressure and 60°C/140°F. In the case of high pressure a pressure reducing valve must be used. Mains water connections must be made via a WRAS approved isolation valve which follows a WRAS approved double check valve.
- 16 **Power Lead:** The unit must be plugged into a 13 amp rated IP56 socket located below counter level.
- 17 **Interconnecting Pipework:** All pipework must be clipped and properly supported.
- 18 **Stainless Steel Hygiene Stand (Optional Extra):** GS1850 unit should be installed on a Stainless Steel Hygiene stand. It can be adjusted up to 2"/50mm in height to allow the unit to be levelled on uneven surfaces and provide access for cleaning.



**Environmental
Products and Services Ltd**

Award Winning Technology

V5 08/08/2022


www.GreaseShield.com

HEAD OFFICE +44 (0) 28 3083 3081

sales@epas-ltd.com

GB OFFICE +44 (0) 161 477 5555

Installation Guide - GreaseShield® 1850-FS1000

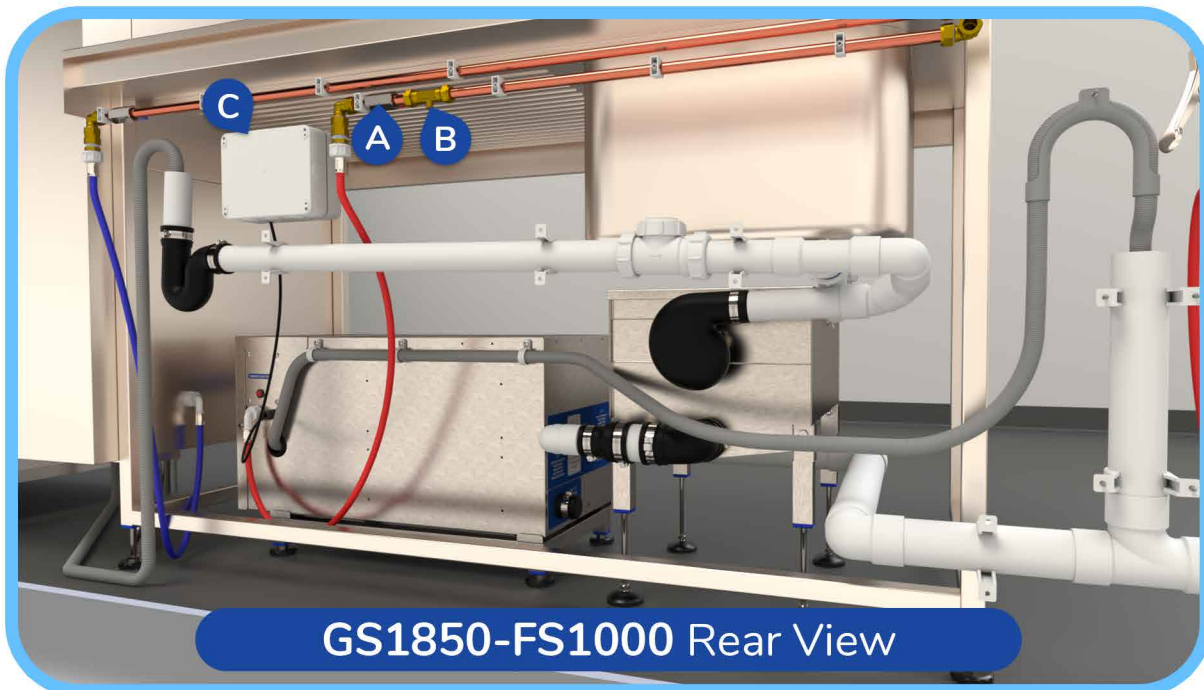

- Make sure the unit is installed on level ground or adjust the stand feet to ensure the unit is level.
- Have a hot water connection available to connect to the unit, if one is not available the unit must be equipped with a Genie H2O to give hot water on demand. Water connection must be made via a WRAS approved isolation valve **A** and double check valve **B**.
- Have an IP56 rated socket **C** below counter level available to the unit to plug into. If a genie H2O is required ensure an additional power supply (preferably a fuse spur) is available.
- Ensure all pipe work into and out of the unit has at least a 1 in 40 fall (downwards angle of 1.5°).
- Clean the FS1000 basket and FOG container daily.
- An Air Admittance Valve **D** must be installed after the running trap so a siphon doesn't occur.
- The Decant Outlet Hose **E** needs to be plumbed into a vented drainage stack, using the drain hose support provided.



DO



DON'T

- Place the unit in passageways where it can be a hazard or be damaged.
- Open the unit or insert hands into any part of the unit; moving parts can cause injury.
- Stand or place heavy objects on top of the unit.
- Dismantle the unit in any way, only qualified service staff are to access the inside of the unit.



**Environmental
Products and Services Ltd**

Award Winning Technology

V8 08/08/2022

www.GreaseShield.com

HEAD OFFICE +44 (0) 28 3083 3081

sales@epas-ltd.com

GB OFFICE +44 (0) 161 477 5555