


Installation Guide - GreaseShield®1500-DPF



- 1 GS1500-DPF Unit:** Ensure that there is sufficient clearance above and to the right of the unit for servicing purposes (5.9"/150mm minimum).
- 2 Inlet Pipe – 1½"/40mm:** To be piped with a sufficient fall of no less than 1 in 40.
- 3 Outlet Pipe – 2"/54mm:** To be piped with a sufficient fall of no less than 1 in 40.
- 4 Decant Outlet Hose – ¾"/18mm:** To be piped directly into the main drainage pipe via a vented drainage stack as shown. The Hose must be fixed in place using the drainage hose support provided.
- 5 Drawer PreFilter:** The Drawer on the GS1500-DPF must be fully closed during normal operation and should only be opened for cleaning and daily maintenance.
- 6 Drawer PreFilter Basket:** A PreFilter basket must be installed into the PreFilter at all times, ensure there is sufficient clearance for basket removal when the drawer is pulled out fully.
- 7 Vortex Flow Controller:** Must be fitted to the Inlet connection.
- 8 Sampling Point:** The unit has an inbuilt sampling point connected to the outlet of the unit: it is essential in the analysis of effluent leaving the unit and is operated by opening the valve on the front of the unit.
- 9 Running Trap:** The unit has an inbuilt Running Trap connected to the Outlet of unit to reduce foul smells.
- 10 FOG Container:** Ensure that the container is not restricted or blocked for daily maintenance.
- 11 Hot Water Solenoid Valve:** Hot water must be connected to the unit using the ¾" BSP (F/F) Red PVC Hose provided, water supply must not exceed **3 bar** pressure and **60°C/140°F**. In the case of high pressure a pressure reducing valve must be used. Mains water connections must be made via a WRAS approved isolation valve which follows a WRAS approved double check valve.
- 12 Power Lead:** The unit must be plugged into a **13 amp** rated **IP56** socket located below counter level.
- 13 Interconnecting Pipework:** All pipework must be clipped and properly supported.
- 14 Adjustable Levelling Feet:** The unit has adjustable levelling feet. It can be adjusted up to **5.1"/130mm** in height to allow the unit to be levelled on uneven surfaces and provide access for cleaning.

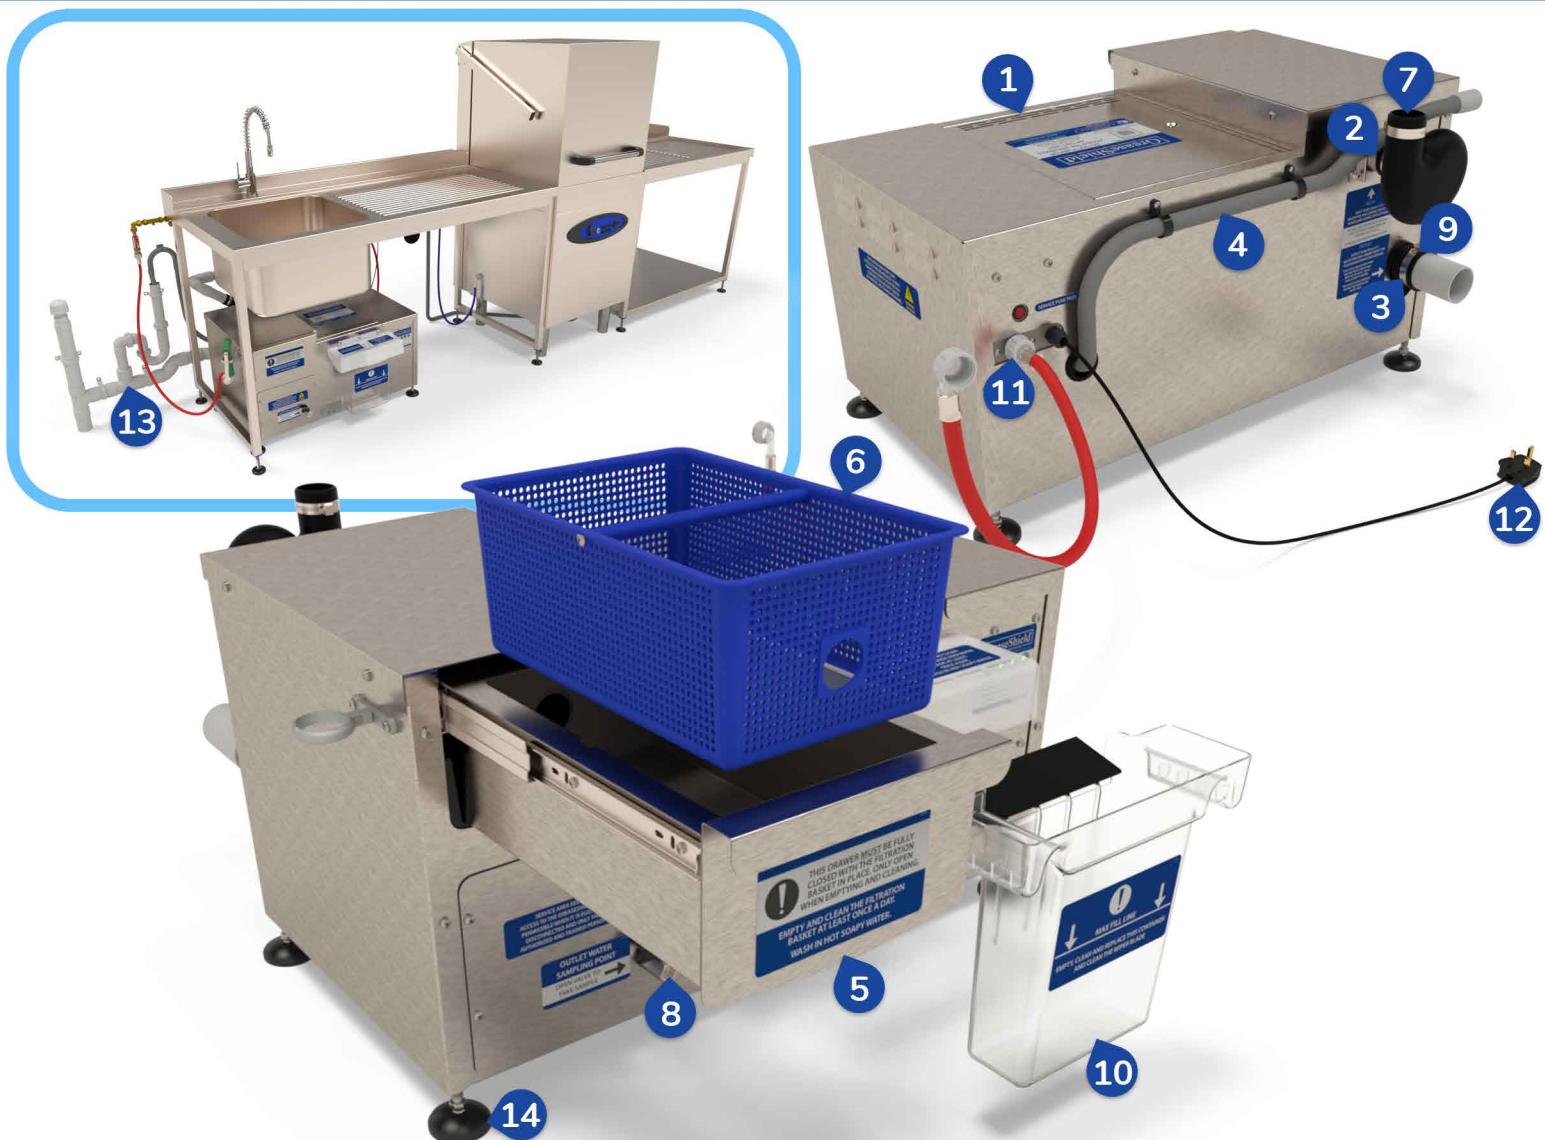

**Environmental
Products and Services Ltd**

Award Winning Technology

V3 23/07/2025

www.GreaseShield.com

HEAD OFFICE +44 (0) 28 3083 3081


sales@epas-ltd.com

GB OFFICE +44 (0) 161 477 5555

Installation Guide - GreaseShield®1500-DPF



GS1500-DPF Front View

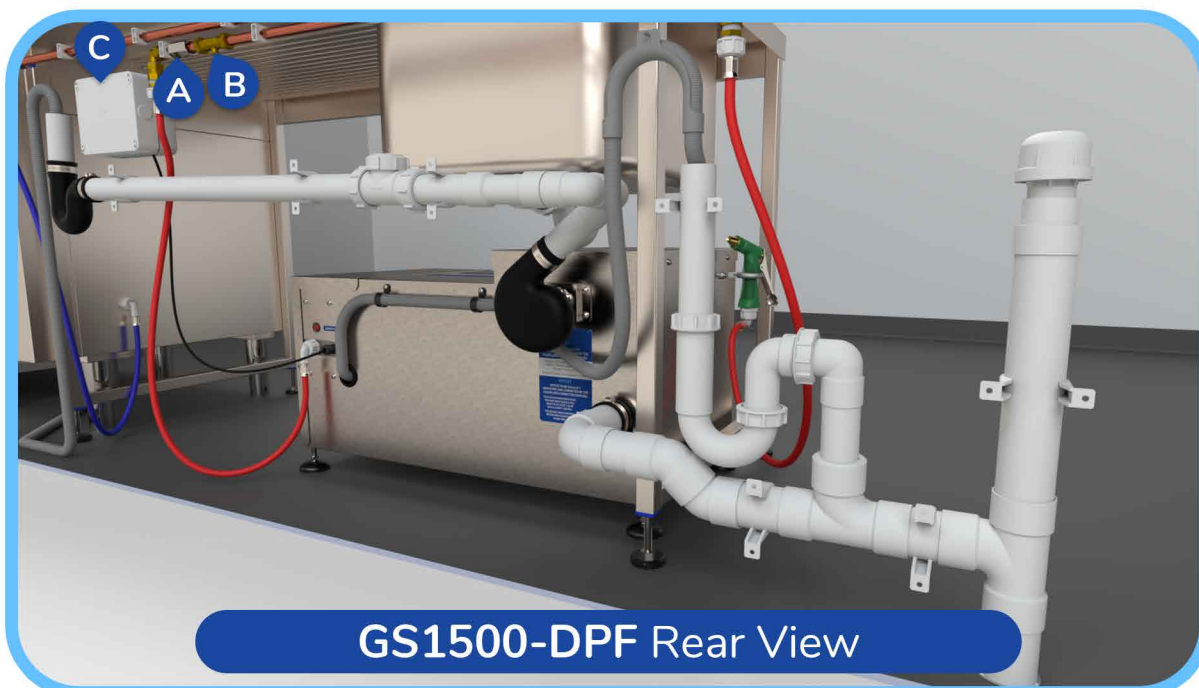

GS1500-DPF Rear View



DO

- Make sure the unit is installed on level ground or adjust the stand feet to ensure the unit is level.
- Have a hot water connection available to connect to the unit, if one is not available the unit must be equipped with a Genie H2O to give hot water on demand. Water connection must be made via a WRAS approved isolation valve **A** and double check valve **B**.
- Have an IP56 rated socket **C** below counter level available to the unit to plug into. If a genie H2O is required ensure an additional power supply (preferably a fuse spur) is available.
- Ensure all pipe work into and out of the unit has at least a 1 in 40 fall (downwards angle of 1.5°).
- Clean the Pre-Filter basket and FOG container daily.
- An Air Admittance Valve **D** must be installed after the running trap so a siphon doesn't occur.
- The Decant Outlet Hose **E** needs to be plumbed into a vented drainage stack, using the drain hose support provided.



DON'T

- Place the unit in passageways where it can be a hazard or be damaged.
- Open the unit or insert hands into any part of the unit; moving parts can cause injury.
- Stand or place heavy objects on top of the unit.
- Dismantle the unit in any way, only qualified service staff are to access the inside of the unit.



Environmental
Products and Services Ltd

Award Winning Technology

V3 23/07/2025

www.GreaseShield.com

HEAD OFFICE +44 (0) 28 3083 3081

sales@epas-ltd.com

GB OFFICE +44 (0) 161 477 5555